



VT 4.2; VT 4.4; VT 4.8 Ersatzteilliste


BECKER Index –

[DEU – Seite 3](#)

[ENG – Page 4](#)

[ESP – Página 5](#)

VT 4.2 – VT 4.4 – VT 4.8 Standard | 0-25 – mit Handgriff / with handle / con empuñadura

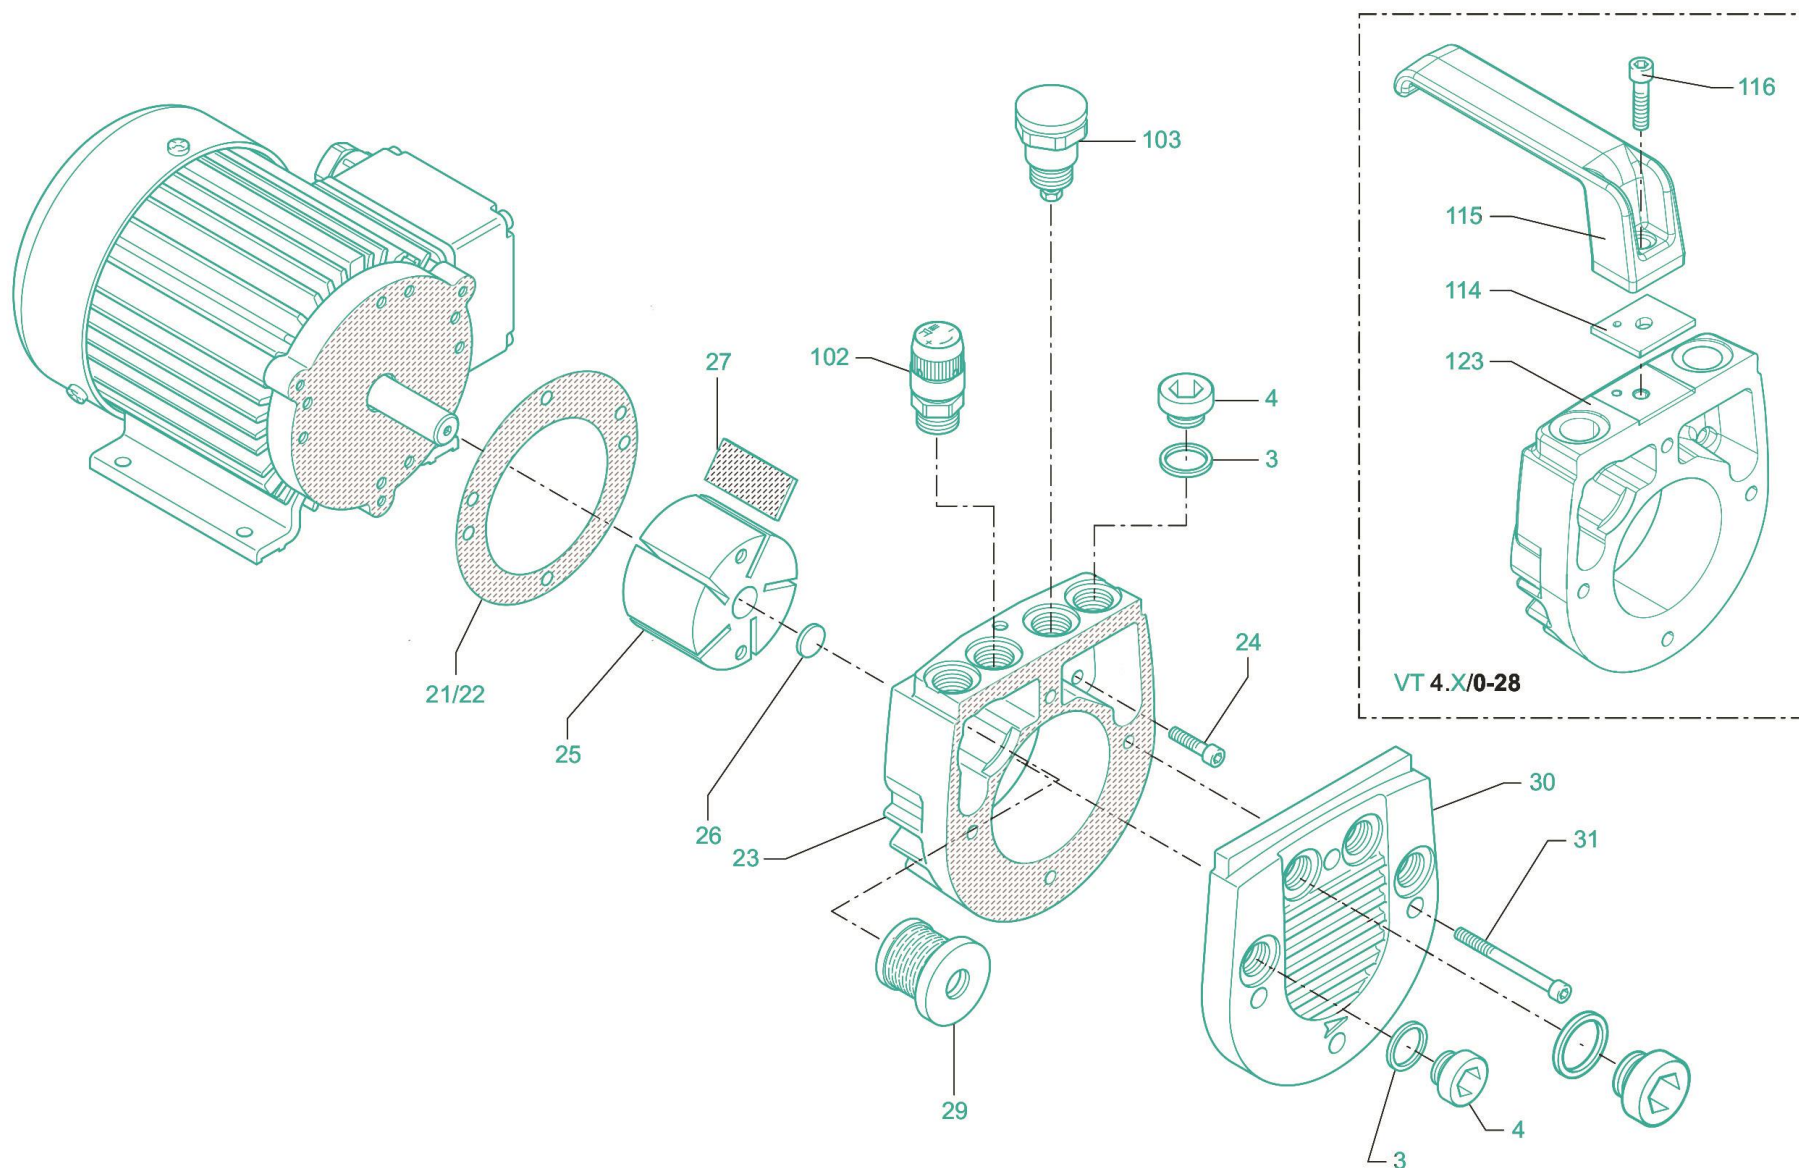



Ersatzteilliste VT 4.2 – VT 4.4 / INDEX -

<i>Pos.</i>	<i>Bestell Nr.</i>	<i>Beschreibung</i>
3	948029 00000	Kupferring A 14x18x2
4	951228 02000	Verschlussschraube g 1/4"
5	948034 00000	Kupferring A 17x21x1,5
6	951228 00000	Verschlussschraube g 3/8"
21	903247 00000	Dichtung 0,127mm
22	903248 00000	Dichtung, Violett 0,254mm
23	000100 27100	Gehäuse
24	945307 00000	Innensechskantschraube
25	020000 27100	Kolben
26	960600 03000	Ronde
27	901387 00005	Schieber-kohle (Satz)
29	909580 00000	Filterpatrone (1x)
30	000700 27100	Seitendeckel
31	945312 00000	Innensechskantschraube
102	736000 99688	Vakuumreguliertventil
103	727500 99689	Abblaseventil

Ersatzteilliste VT 4.8 / INDEX -

<i>Pos.</i>	<i>Bestell Nr.</i>	<i>Beschreibung</i>
3	948034 00000	Kupferring a 14x18x2
4	951228 00000	Verschlussschraube g 1/4"
21	03250 00000	Dichtung 0,127mm
22	903249 00000	Dichtung, violett 0,254mm
23	000100 27200	Gehäuse
24	945308 00000	Innensechskantschraube
25	020000 27200	Kolben
26	960600 09000	Ronde
27	901388 00005	Schieber-kohle (Satz)
29	909581 00000	Filterpatrone (1x)
30	000700 27200	Seitendeckel
31	945314 00000	Innensechskantschraube
102	736000 99688	Vakuumreguliertventil
103	727500 99689	Abblaseventil



Spare Parts List VT 4.2 – VT 4.4 / INDEX -

Pos. Ident No Description

3	948029 00000	Sealing ring A 14x18x2
4	951228 02000	Locking screw g 1/4"
5	948034 00000	Sealing ring A 17x21x1,5
6	951228 00000	Locking screw g 3/8"
21	903247 00000	Gasket 0,127mm
22	903248 00000	Gasket, violet 0,254mm
23	000100 27100	Pump-body
24	945307 00000	Socket head screw
25	020000 27100	Rotor
26	960600 03000	Filling piece
27	901387 00005	Carbon vanes (kit)
29	909580 00000	Filter cartridge (1x)
30	000700 27100	Lid
31	945312 00000	Socket head screw
102	736000 99688	Vacuum regulating valve
103	727500 99689	Blow-off valve

Spare Parts List VT 4.8 / INDEX -

Pos. Ident No Description

3	948034 00000	Sealing ring A 17x21x1,5
4	951228 00000	Locking screw g 3/8"
21	03250 00000	Gasket 0,127mm
22	903249 00000	Gasket, violet 0,254mm
23	000100 27200	Pump-body
24	945308 00000	Socket head screw
25	020000 27200	Rotor
26	960600 09000	Filling piece
27	901388 00005	Carbon vanes (kit)
29	909581 00000	Filter cartridge (1x)
30	000700 27200	Lid
31	945314 00000	Socket head screw
102	736000 99688	Vacuum regulating valve
103	727500 99689	Blow-off valve



Lista de piezas de recambio VT 4.2 – VT 4.4 / INDEX -

<i>Pos.</i>	<i>Ident No</i>	<i>Description</i>
3	948029 00000	Anillo de cobre A 14x18x2
4	951228 02000	Tornillo de cierre g 1/4"
5	948034 00000	Anillo de cobre A 17x21x1,5
6	951228 00000	Tornillo de cierre g 3/8"
21	903247 00000	Junta 0,127mm
22	903248 00000	Junta, violeta 0,254mm
23	000100 27100	Carcasa
24	945307 00000	Tornillo hexagonal interior
25	020000 27100	Émbolo
26	960600 03000	Rodaja
27	901387 00005	Empujador de carbón (kit)
29	909580 00000	Cartucho de filtro (1x)
30	000700 27100	Tapa lateral
31	945312 00000	Tornillo hexagonal interior
102	736000 99688	Válvula reguladora de vacío
103	727500 99689	Válvula de barrido

Lista de piezas de recambio VT 4.8 / INDEX -

<i>Pos.</i>	<i>Ident No</i>	<i>Description</i>
3	948034 00000	Anillo de cobre A 17x21x1,5
4	951228 00000	Tornillo de cierre g 3/8"
21	03250 00000	Junta 0,127mm
22	903249 00000	Junta, violeta 0,254mm
23	000100 27200	Carcasa
24	945308 00000	Tornillo hexagonal interior
25	020000 27200	Émbolo
26	960600 09000	Rodaja
27	901388 00005	Empujador de carbón (kit)
29	909581 00000	Cartucho de filtro (1x)
30	000700 27200	Tapa lateral
31	945314 00000	Tornillo hexagonal interior
102	736000 99688	Válvula reguladora de vacío
103	727500 99689	Válvula de barrido